



# EXPRESS CUSTOM MFG.

## E.T.V. INSTALLATION



**IMPORTANT: BE SURE TO CHECK THE UNDER-SIDE OF THE TRUCK BED BEFORE DRILLING ANY HOLES. EXPRESS CUSTOM IS NOT LIABLE FOR ANY DAMAGES CAUSED BY IMPROPER INSTALLATION.**



### HARDWARE INCLUDED

- A) x4 - 1/2" x 3" Grade 8 Bolts
- B) x4 - 1/2" Lock Washers
- C) x4 - 1/2" Nuts
- D) x8 - 1/2" Washers
- E) x8 - Aluminum Plates

**1**

**Step 1.**  
Place E.T.V. unit inside pick-up bed. Put E.T.V. unit against bulkhead.  
(Figure #1)



Figure #1

**2**

**Step 2.**  
Center E.T.V. in pick up bed.  
(Figure #2)



Figure #2

**3**

**Step 3.**  
Drill Four 1/2" holes through the pick up bed floor, using the holes already cut in the floor of the E.T.V. (Figure #3)

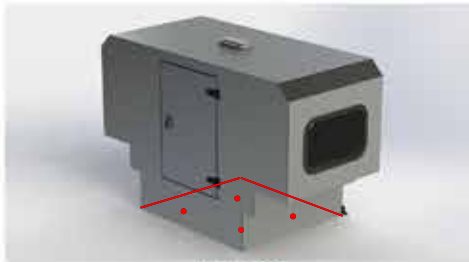


Figure #3

**4**

**Step 4.**  
Bolt down the E.T.V. unit with hardware through the four new holes.  
(Figure #4 & #5)



Figure #4



Figure #5

# Done!

**Got Questions?  
Need Assistance?  
Contact us.**



Express Custom MFG.  
Main Office

1365 Alberni Highway

Parksville, B.C.

V9P 2B9

TF: 1-800-688-6840

PH: 1-250-248-2218

email@expresscustom.com